

INSTALLATION

Make sure the clearance of the muffler protector and rear fender B is equal on both sides.

Install the muffler and loosely tighten the muffler mounting bolts/washer.

Tighten the muffler mounting bolts first, then tighten the muffler band bolts to the specified torque.

TORQUE:



Muffler mounting bolt: 27 N·m (2.8 kgf·m, 20 lbf·ft)

Muffler band bolt: 27 N·m (2.8 kgf·m, 20 lbf·ft)

Recheck the clearance of the muffler and protector.

Install the front muffler protector and tighten the socket bolt securely.

Install the rear cowl (page 2-3).

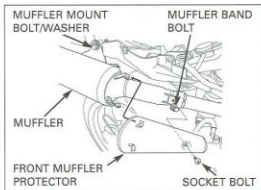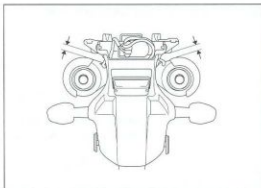

If you remove the exhaust joint pipe, remove the swingarm (refer to section 14).


EXHAUST PIPE

REMOVAL

Remove the muffler (page 2-5).

Remove the two radiator mounting bolts. Remove the radiator guide from the frame and move the radiator forward.

Do not damage the water hoses.

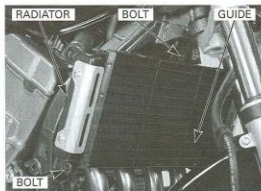

Loosen the exhaust pipe band bolt and exhaust pipe mounting bolts/nuts.

