



FRAME/BODY PANELS/EXHAUST SYSTEM


Install the muffler guard while aligning it boss with the grommet onto the seat rail.

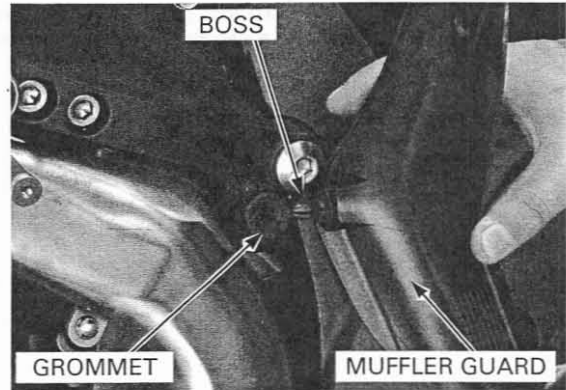

Install the pan screw, collar and screw, then tighten the screws securely.

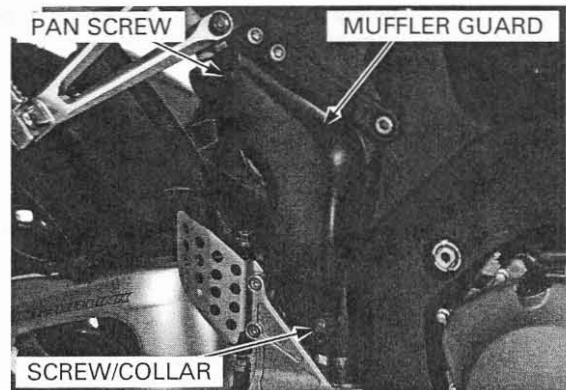

Install the radiator onto the bracket while aligning the grommet and frame boss.

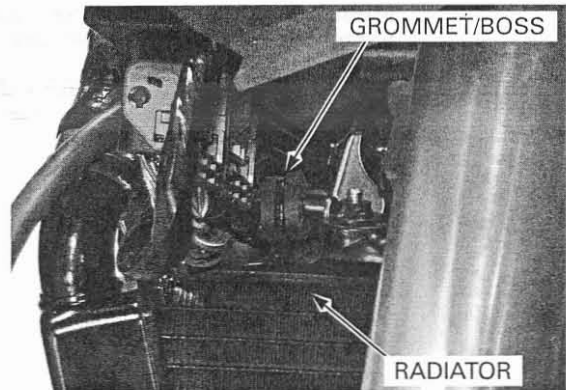

Install and tighten the radiator upper mounting bolt.

