



COOLING SYSTEM


Connect the fan motor 2P (Black) connector.

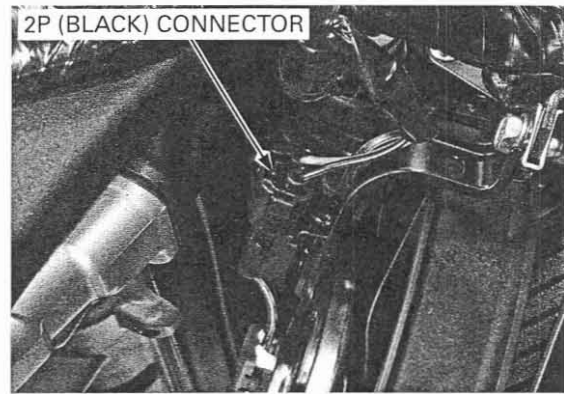

Connect the filler neck joint hose and tighten the hose clamp screw.
Connect the siphon hose to the filler neck and secure it with clip.

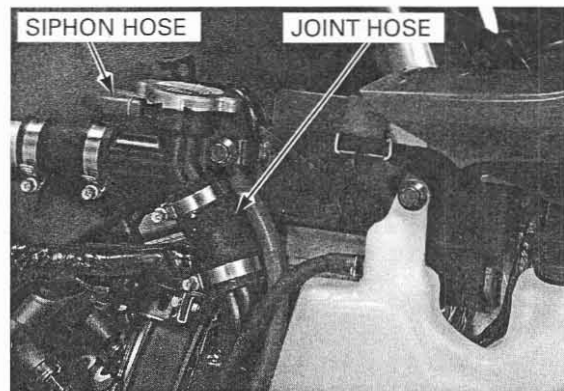

Route the radiator drain hose and overflow hose into the bracket. Install the air guide/reserve tank lower bracket onto the radiator, tighten the bolts securely.
Install the radiator overflow hose guide onto the radiator, tighten the bolt.

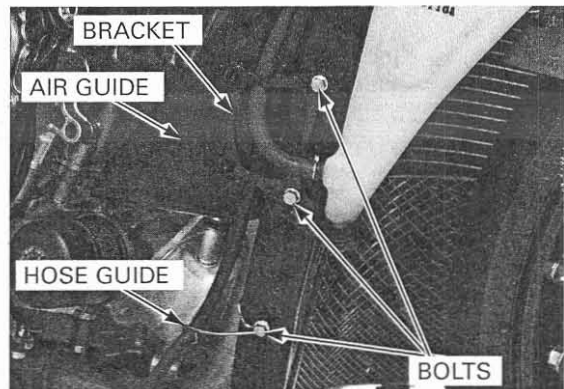

Connect the lower radiator hose and tighten the hose clamp screw.

Fill the system with the recommended coolant (page 7-6).

Install the under cowls/middle cowls (page 3-7).

