


# Right Handlebar Removal/Installation

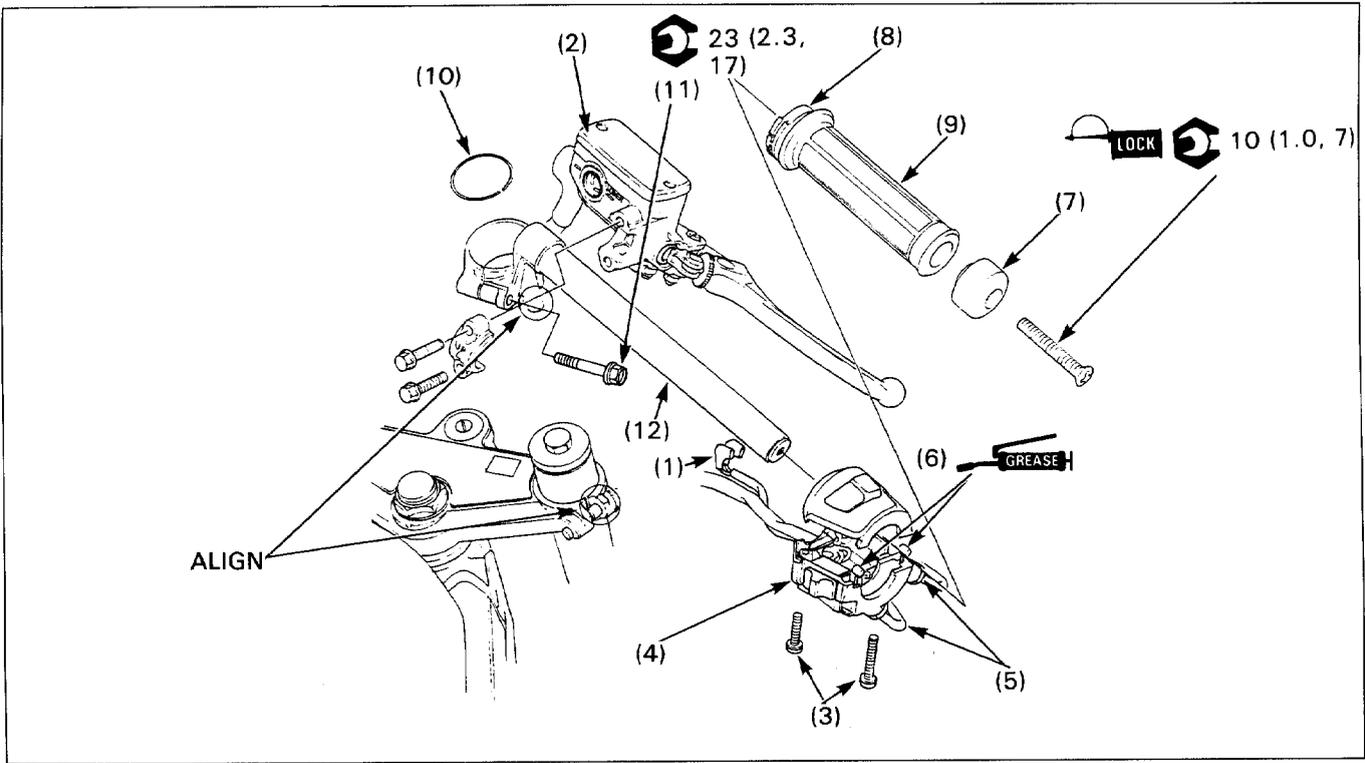

**NOTE**

- Using wires, hang the front brake master cylinder at least as high as the position it was originally installed at to prevent air from getting into the master cylinder. Do not twist the brake hose.
- Route the cables and wire harnesses properly (page 1-29).
- Adjust the throttle cable after installation.

Procedure	Q'ty	Remarks
<b>Removal Order</b>		• Installation is in the reverse order of removal.
(1) Front brake light switch connector	2	
(2) Master cylinder	1	Align the holder end with the punch mark on the handlebar and face the holder UP mark upward. Tighten the upper bolt first, then the lower bolt.
(3) Right handlebar switch housing screw	2	Tighten the front screw first, then the rear screw.
(4) Right handlebar switch housing	1	
(5) Throttle cable nut	1	
(6) Throttle cable	2	Don't bend or distort the cables.
(7) Handlebar weight	1	Align its boss with the inner weight.
(8) Throttle pipe	1	
(9) Throttle grip	1	Apply Honda Bond A to the inside surface of the grip.
(10) Stop ring	1	Install into the fork groove properly.
(11) Handlebar pinch bolt	1	Tight while pushing the handlebar forward.
(12) Right handlebar	1	Align the handlebar boss with the top bridge slot.