


Lower Joint Removal/Installation

Install the shock absorber compressor and attachment on the rear shock absorber as shown.

S TOOL

Shock absorber compressor **07GME-0010000**
 or **07959-3290001**
 – screw assembly **07GME-0010100**
Attachment **07959-MB10000**

Turn the compressor handle and slowly compress the spring.

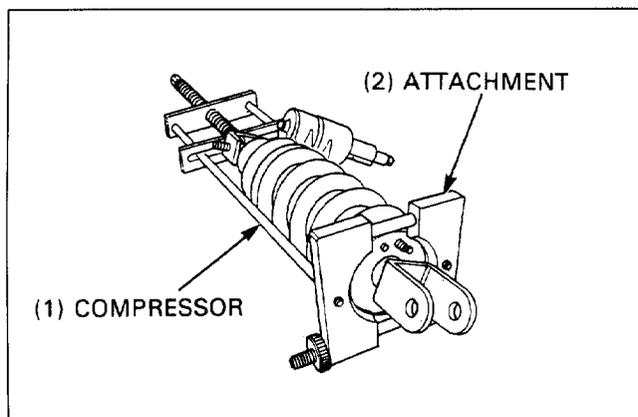


Hold the lower joint and loosen the lock nut (turn the nut clockwise).

Remove the lower joint and clean off any locking agent from the threads.

Apply a locking agent to the damper rod threads.
 Install the lower joint securely onto the damper rod.
 Hold the lower joint and torque the lock nut.

Torque: 65N · m (6.5kg-m, 47ft-lb)

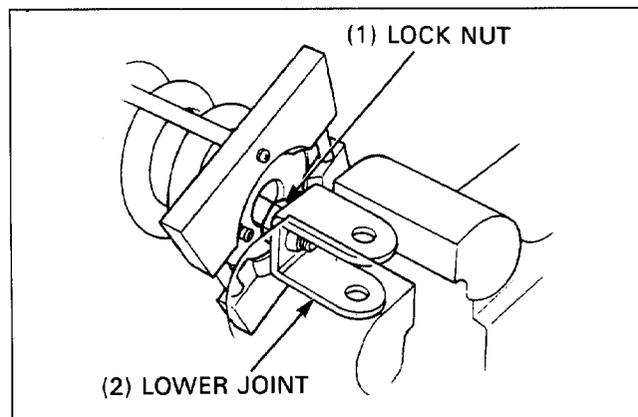

NOTE

- Install the spring seat stopper with the projections facing forward.
- Install the lower joint aligning the edge of the joint with the projections on the spring seat stopper.

