


THROTTLE OPERATION

Refer to the Safety Precautions on page 55 .

1. Check for smooth rotation of the throttle grip from the fully open to the fully closed position at both full steering positions.
2. Measure the throttle grip freeplay at the throttle grip flange.
The standard freeplay should be approximately:
2.0 – 6.0 mm (0.08 – 0.24 in)

Major freeplay adjustments, such as after replacing the throttle cables or removing the carburetor, are made with the lower adjuster (1). Minor freeplay adjustments are made with the upper adjuster (2). To adjust freeplay, loosen the lock nut (3) or (4), and turn the adjuster (1) or (2). Tighten the lock nut after adjustment. After adjustment, check again for smooth rotation of the throttle grip from the fully closed to the fully open position with the steering to the full right and left as well as straight ahead.

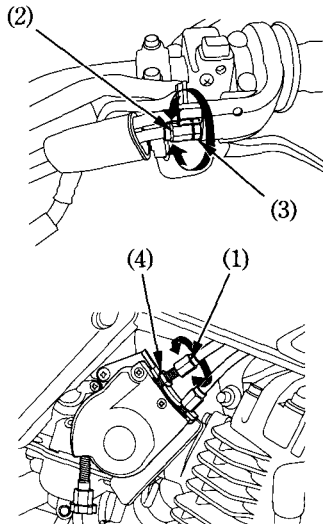

- (1) Lower adjuster
(2) Upper adjuster

- (3) Upper lock nut
(4) Lower lock nut