

#### NOTE:

- \* Please dispose of used engine oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local service station for reclamation. Do not throw it in the rubbish or pour it on the ground.

#### CAUTION:

- \* **Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.**


#### SPARK PLUGS

(Refer to maintenance precautions on page 54).  
Recommended plugs:

Standard:

DPR9EA-9 (NGK) or X27EPR-U9 (ND)

1. Remove the seat (see page 38).
2. Remove the fuel tank front mount bolts (1) and bracket.

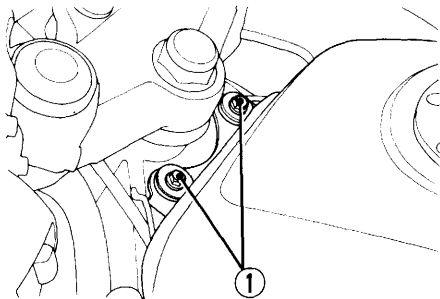

(1) Mount bolts