


# Drive Chain

5. Replace the drive chain if chain slack is excessive when the rear axle is moved to the farthest limit of adjustment. Excessive slack indicates the chain is worn beyond its service limit.

To check the chain's service limit, remove the drive chain (page 104 ). Then measure the distance between a span of 117 pins, from pin center to pin center. If the distance exceeds the service limit, the drive chain is worn out and should be replaced.

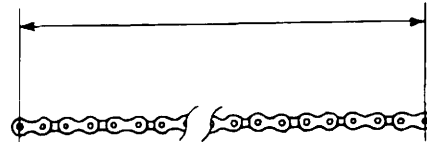

Measure a span of 117 pins

New Chain: 58.5 in (1,486 mm)  
Service Limit: 59.7 in (1,516 mm)

(cont'd)