

## SPARK PLUGS

(Refer to maintenance precautions on page 56).

Recommended plugs:

Standard:

DPR8EA-9 (NGK) or X24EPR-U9 (ND)


For cold climate (Below 5°C/41°F):

DPR7EA-9 (NGK) or X22EPR-U9 (ND)

For extended high speed riding:

DPR9EA-9 (NGK) or X27EPR-U9 (ND)

1. Remove the heat guard by removing the screws.
2. Disconnect the spark plug caps from the spark plugs.
3. Clean any dirt from around the spark plug bases. Remove the spark plugs using the plug wrench furnished in the tool kit.

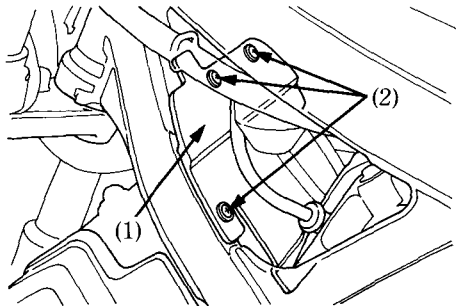

(1) Heat guard

(2) Screws