

### Installation Note:

To install the front wheel assembly, position the wheel between the fork legs.

Insert the front axle from the left side, through the left front fork leg and wheel hub.

Position the lug on the speedometer gearbox against the lug (7) on the left fork leg.

Install and tighten the axle bolt to the specified torque.

Tighten the axle pinch bolts to the specified torque.

Axle bolt torque:

60 N·m (6.0 kg-m, 44 lb-ft)

Axle pinch bolts torque:

22 N·m (2.2 kg-m, 16 lb-ft)


Install the brake caliper.

Tighten the brake caliper mount bolts to the specified torque.

Brake caliper mount bolts torque:

27 N·m (2.7 kg-m, 20 ft-lb)

Connect the speedometer cable with the set screw.

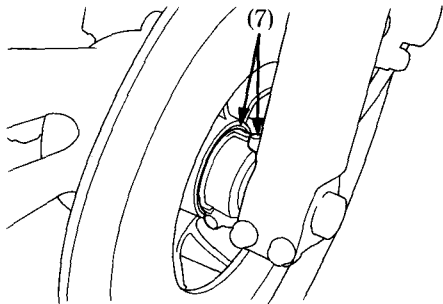

(7) Lugs