

SPARK PLUG

Refer to the Safety Precautions on page 61 .

Recommended plugs:


Standard:

CR6HSA (NGK) or
U20FSR-U (DENSO)

NOTICE

Never use a spark plug with an improper heat range. Severe engine damage could result.

1. Lift up the body cover (page 38).
2. Disconnect the spark plug cap (1) from the spark plug.
3. Clean any dirt from around the spark plug bases.
4. Remove the spark plugs using the spark plug wrench furnished in the tool kit.

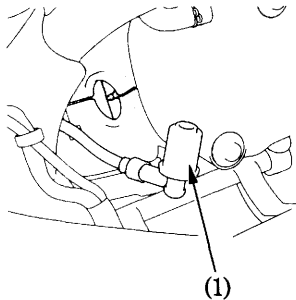

(1) Spark plug cap