


drained, reinstall the drain plug making sure that the drain plug packing used on the plug is in good condition.

5. Fill the crankcase through the oil filler opening with approximately 0.8 liter (1.7 U.S.p.t., 1.4 Imp. pt.) of recommended grade oil. Check the oil level with filler cap dipstick①, however, when making this check, do

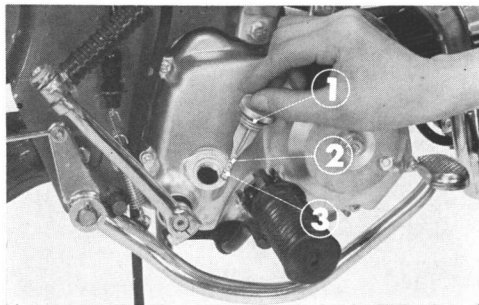

- ① Oil filler cap
② Upper level mark ③ Lower level mark

not screw in the cap. Oil level should be between the upper ② and lower ③ oil level marks on the dipstick.

NOTE :

- Do not operate the engine if the oil level is below the lower oil level mark on the dipstick.
- When operating the motorcycle under unusually dusty condition, it is recommended that the oil change be performed at more frequent intervals than that which is specified in the maintenance schedule ; this will have a very beneficial effect on the engine.