


Safe Riding Precautions

Practice with the throttle limiter adjusted as delivered (approximately 24 km/h (15 mph) top speed) until you are confident in shifting gears, braking, and making turns.


Throttle Limiter Adjustment

1. Remove the screw (1) and stay (2).
2. Loosen the lock nut (3).
3. Turn the throttle limiter screw (4) clockwise to reduce throttle lever movement or counterclockwise to increase throttle lever movement. Hold the throttle limiter screw in place and tighten the lock nut.
4. Reinstall the stay and screw.

RIGHT HANDLEBAR

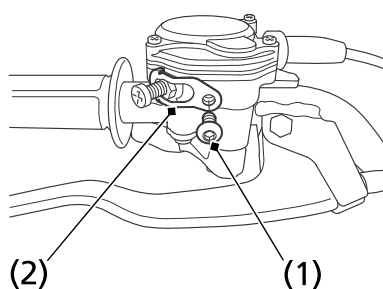

(1) screw
(2) stay

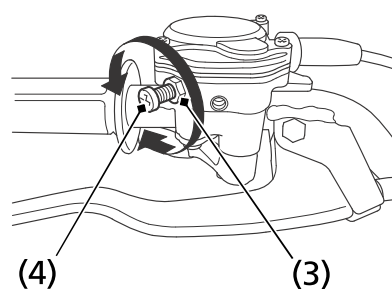

(3) lock nut
(4) throttle limiter screw

For higher top speed, removing the air intake restrictor is required. Adjusting for increased throttle lever movement without removing the air intake restrictor will cause the engine to run roughly at higher speeds.

54 Basic Operation & Riding