


F-15 Brake Pedal · Main Stand · Step Bar

I 16

F-15 Brake Pedal · Main Stand · Step Bar

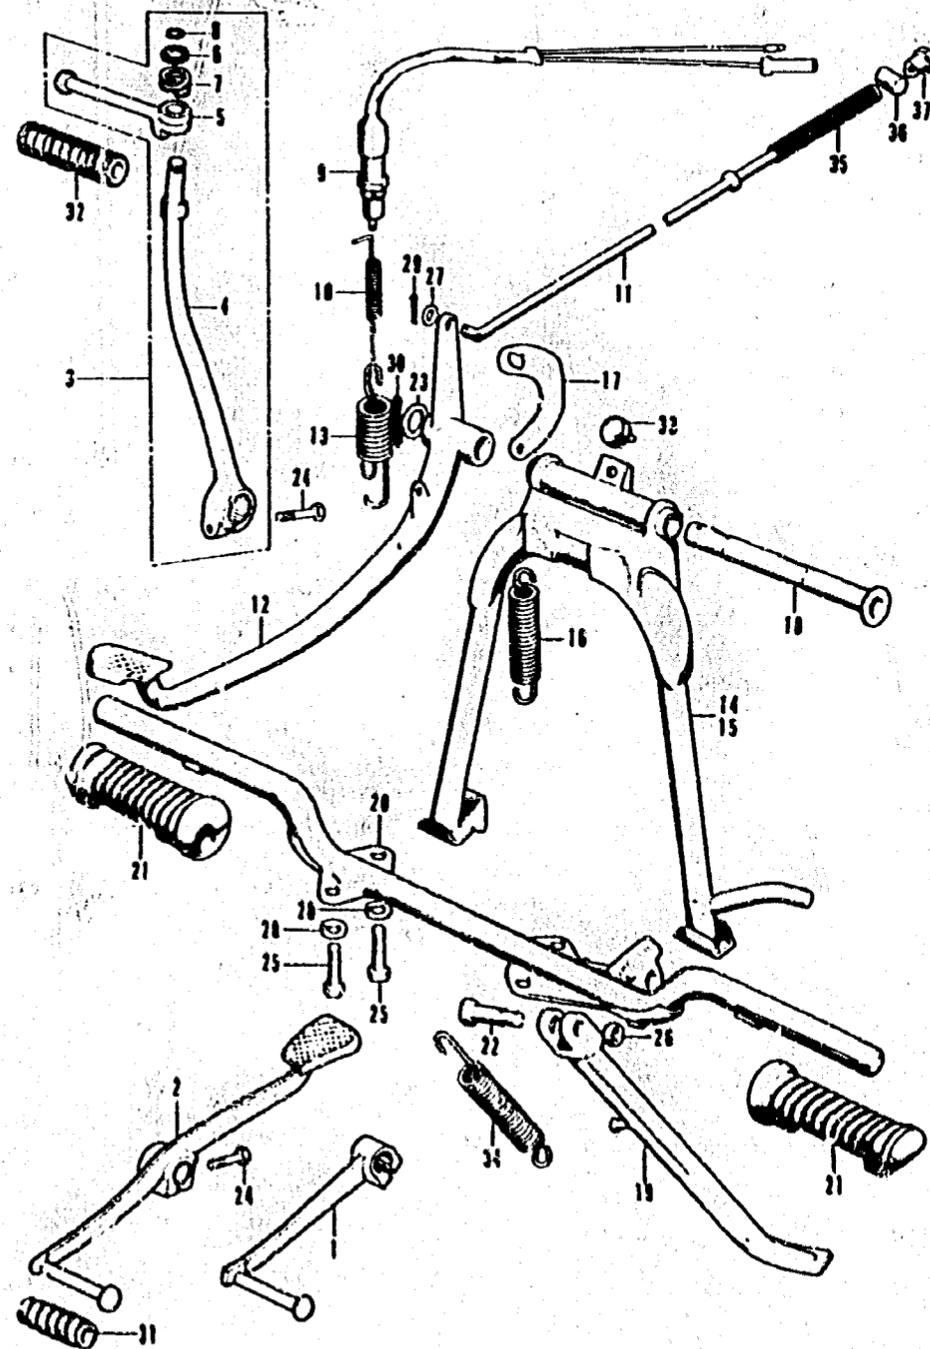

Ref. No.	Part No.	Description	Reqd. No. CB125S1	Serial No.	Area Code
1	24700-107-700	PEDAL COMP., GEAR CHANGE	1		E,F,U
2	24700-108-010	PEDAL COMP., GEAR CHANGE	1		01,03,SA
3	28300-331-671	ARM ASSY., KICK STARTER	1		
4	28301-331-671	ARM, KICK STARTER	1		
5	28302-001-000	PEDAL, KICK STARTER	1		
6	28303-001-000	WASHER, KICK STARTER KNUCKLE	1		
7	28322-001-000	SPRING, KICK STARTER KNUCKLE	1		
8	28324-001-000	CLIP, KICK STARTER KNUCKLE	1		
9	35350-292-003	SWITCH ASSY., STOP	1		
10	35357-107-010	SPRING, STOP SWITCH	1		
11	43450-041-000	ROD, REAR BRAKE	1		
12	46500-107-010	PEDAL COMP., BRAKE	1		
13	46514-107-010	SPRING, BRAKE PEDAL	1		
14	50500-107-700B	STAND COMP., MAIN	1		F
15	50500-108-76 B	STAND COMP., MAIN	1		01,03,E,SA,U
16	50522-028-010	SPRING, MAIN STAND	1		
17	50523-107-000	HOOK, MAIN STAND SPRING	1		
18	50526-028-010	PIPE, MAIN STAND PIVOT	1		
19	50530-107-700B	BAR COMP., SIDE STAND	1		
20	50610-107-690B	BAR COMP., STEP	1		
21	50661-110-000	RUBBER, STEP	2		
22	90108-223-000	SCREW, SIDE STAND PIVOT	1		
23	90521-028-000	WASHER, 17X22	1		
24	92000-06020	BOLT, HEX., 6X20	2		
25	92000-08020-0A	BOLT, HEX., 8X20	4		
26	94002-10000-0S	NUT, HEX., 10MM	1		
27	94101-06000	WASHER, PLAIN, 6MM	1		
28	94111-08000	WASHER, SPRING, 8MM	4		
29	94201-16150	PIN, SPLIT, 1.6X15	1		
30	94201-30250	PIN, SPLIT, 3.0X25	1		
31	95011-40000	RUBBER, GEAR CHANGE PEDAL	1		
32	95011-51000	RUBBER A, KICK STARTER	1		
33	95011-61000	RUBBER A, STAND STOPPER	1		01,03,E,SA,U
34	95014-72101	SPRING A, SIDE STAND	1		
35	95014-73100	SPRING A, BRAKE ROD	1		
36	95015-31000	JOINT A, BRAKE ARM	1		
37	95015-41000	NUT A, ADJUSTING	1		

324-35
B110-29