


E-10 Right Crankcase Cover - Oil Pump

E-10 Right Crankcase Cover - Oil Pump

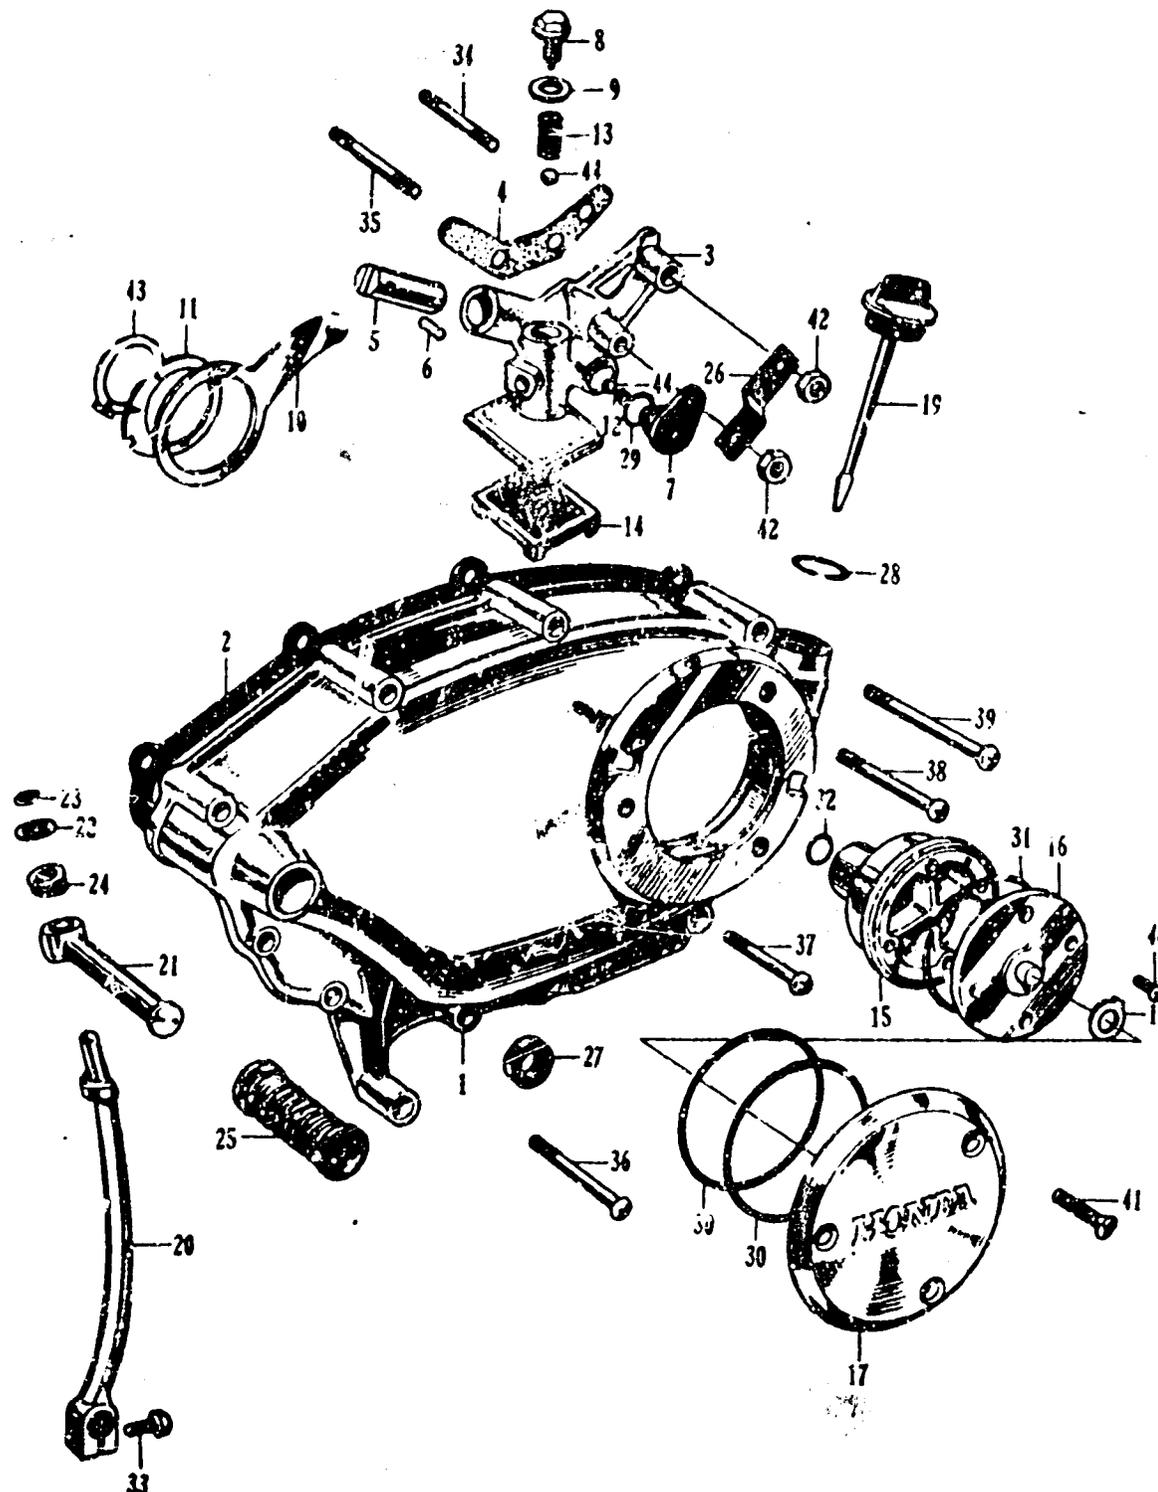

Ref. No.	Part No.	Description	No. Reqd.		Remarks
			CD 125	CD 125A	
1	11330-230-345	COVER, right, crankcase	1	1	CD125E-1012758-1059418
	11330-230-060	COVER, right, crankcase	1	1	CD125E-1059419
2	11394-230-315	PACKING, right, crankcase cover	1	1	
	15200-230-000	(Superseded by 15200-246-000)			
	15200-246-000	PUMP ASSY., oil	1	1	
3	15210-230-000	BODY, oil pump	1	1	
4	15219-200-000	PACKING, oil pump body	1	1	
5	15231-205-000	PLUNGER, pump	1	1	
6	15235-205-000	PIN, pump plunger	1	1	
7	15260-205-000	GUIDE, outlet valve	1	1	
8	15265-200-010	BOLT, suction valve	1	1	
9	15266-200-000	PACKING, suction valve bolt	1	1	
10	15281-205-000	ROD, pump	1	1	
11	15292-200-000	WASHER, pump rod side	1	1	
12	15345-230-000	SPRING, check valve	1	1	
13	15346-230-000	SPRING, suction valve	1	1	
14	15421-202-000	SCREEN, pump filter	1	1	
15	15440-230-020	(Superseded by 15440-246-000 with 93600-04016-0A)	1	1	CD125E-1012758-1113956
	15440-246-000	ROTOR, oil filter	1	1	CD125E-1113957
16	15451-200-020	CAP, oil filter	1	1	
17	15481-200-030	COVER, oil filter	1	1	
18	15493-202-000	WASHER, oil filter rotor	1	1	
19	15550-230-000	GAUGE, oil level	1	1	
	28300-230-000	KICK STARTER ASSY.	1	1	
20	28301-230-010	ARM, kick starter	1	1	
21	28302-200-000	PEDAL, kick starter	1	1	CD125E-1012758-1083905
	28302-001-000	PEDAL, kick starter	1	1	CD125E-1083906
22	28303-001-000	WASHER, kick starter knuckle	1	1	
23	28324-001-000	CLIP, kick starter knuckle	1	1	
24	28322-001-000	SPRING, kick starter knuckle	1	1	
25	28311-200-000	RUBBER, kick starter	1	1	CD125E-1012758-1083905
	28311-001-000	RUBBER, kick starter	1	1	CD125E-1083906