


CYLINDER HEAD/VALVES

Install and tighten the 6 mm flange bolts.




Install the cam chain tensioner slider into the cylinder head.
Install the new sealing washer and tighten the cap nut.

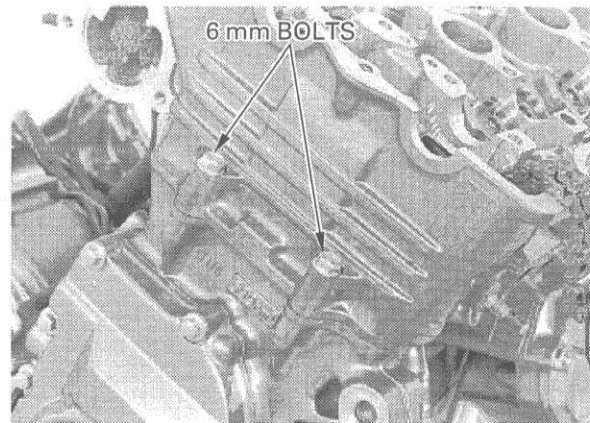

Connect the bypass tube.

Install the following:

- Coolant temperature sensor (page 19-10)
- Camshaft (see below)
- PAIR control valve (page 5-27)
- Thermostat (page 6-8)
- Radiator (page 6-13)
- Carburetor (page 5-24)
- Exhaust system (page 2-5)

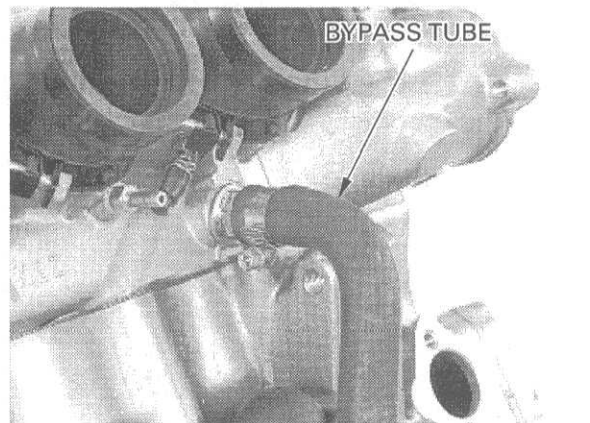

CAMSHAFT INSTALLATION

Apply molybdenum disulfide oil to the outer surface of the each valve lifter.

Install the shims and valve lifters into the valve lifter bores.

