



HYDRAULIC BRAKE


Install the pad spring with its bent side downward.

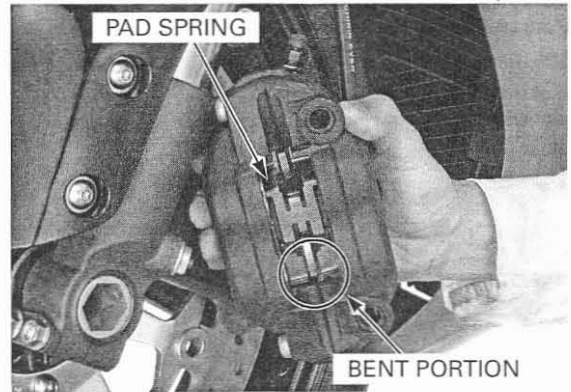

Install the new brake pads with the cut portion of the shims toward entrance side of the brake disc which rotates normal direction.

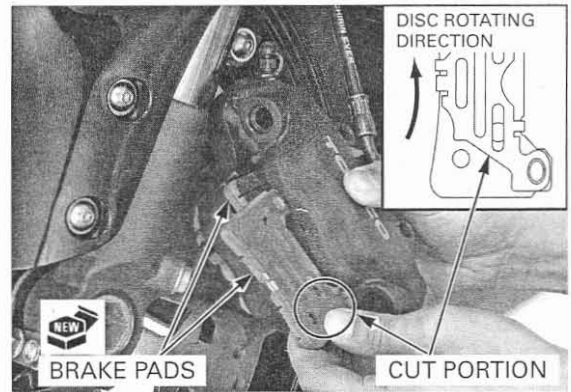

Install the pad pins while pushing the brake pad up into the caliper.

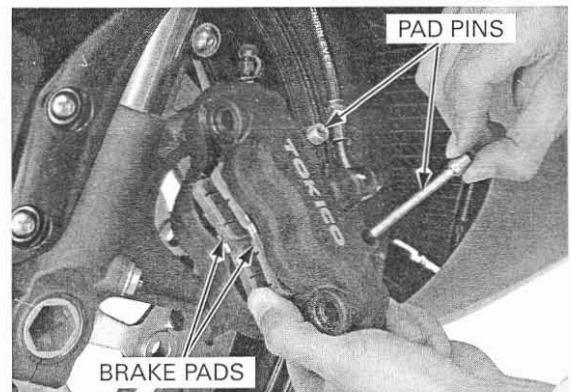

Be careful not to damage the pads. Install the brake caliper to the fork leg so that the disc is positioned between the pads (page 16-30).

Tighten the new brake caliper mounting bolts to the specified torque.

TORQUE: 45 N·m (4.6 kgf·m, 33 lbf·ft)

Tighten the pad pins to the specified torque.

TORQUE: 16 N·m (1.6 kgf·m, 12 lbf·ft)

