



Face Vee block upwards and measure warpage of fork pipe with dial gauge. The value will give the degree of warpage

Service Limit: 0.2mm (replace if above)

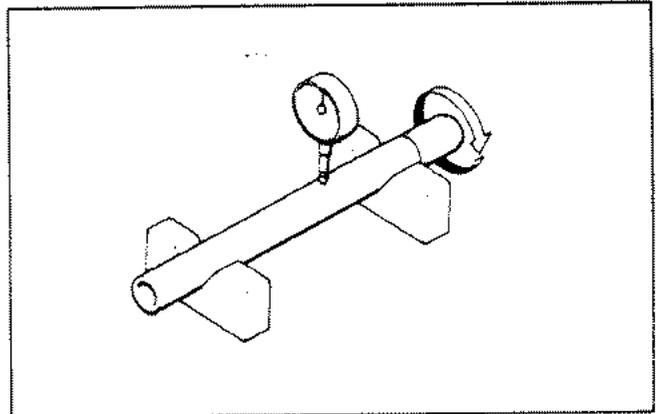

Inspect guide bush and fork pipe bush rubbing face. When rubbing portions more than 3/4 and metal can be seen (teflon is peeling off), or if damaged, then replace. Inspect back up ring inspection portion. If there is a change in shape, then replace

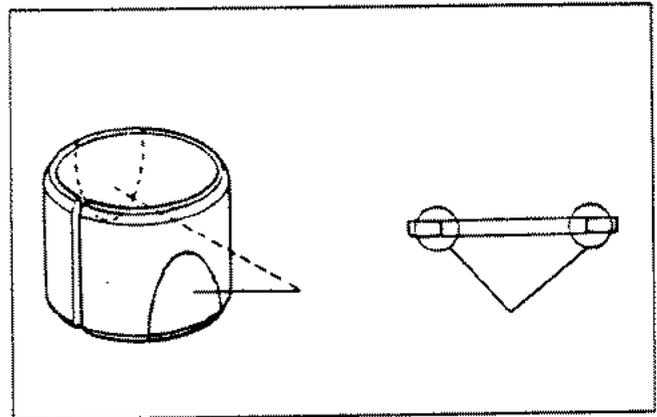

ASSEMBLY

