

Install the carburetor assembly into the carburetor insulators and tighten the insulator band bolts.



NOTE:

Insert the screwdriver through the hole in the heat guard to tighten the front carburetor insulator band bolt.

TORQUE: 1 N·m (0.1 kgf·m , 0.7 lbf·ft)

Connect the throttle sensor 3P (white) connector.


Install the air cleaner housing (page 5-4).
Fill and bleed the cooling system (page 6-5).

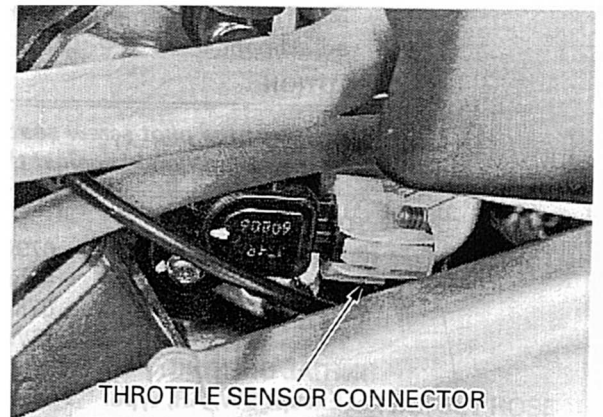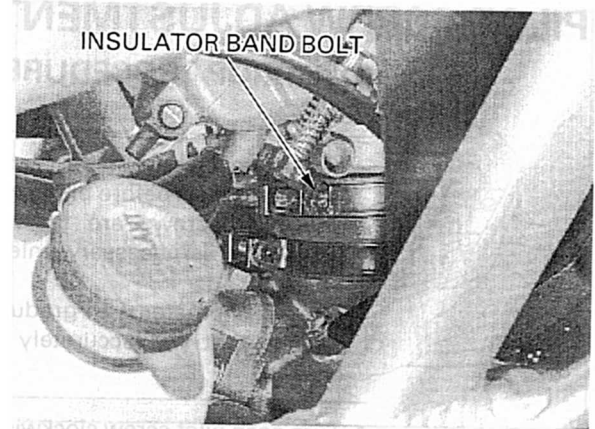

CHOKE SYSTEM

Remove the carburetors (page 5-5).

Check the starting enrichment (SE) valve for scoring, scratches or wear.
Check the seat at the tip of the SE valve for stepped wear.
Replace the SE valve set if necessary.

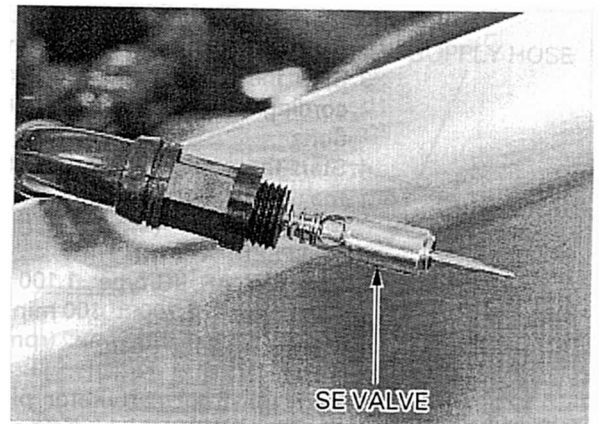

Check the choke cables for frayed, kinked or other damage.
Remove the bolt and replace the choke cable assembly if necessary.

Install the carburetors (page 5-16).

