
Side Cover Removal

Refer to *Safety Precautions* on page 43.

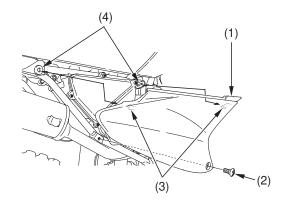

- (1) right side cover
- (2) screw

- (3) side cover prongs
- (4) rubber grommets

The right side cover (1) must be removed to service the air cleaner.

Right Side Cover Removal

- 1. Remove the screw (2).
- 2. Pull both side cover prongs (3) out of the rubber grommets (4).

Right Side Cover Installation

- 1. Slide the top of the side cover under the bottom edge of the seat.
- 2. Align the side cover prongs with the rubber grommets. Press the side cover into position.
- 3. Install the securing screw and tighten it.